

Reprogramming operating elements (reassigning button functions)

The following 8 controls can be assigned new functions:

Left shift paddle, right shift paddle, accelerator pedal, brake pedal, L3, R3, gear stick forward, gear stick back.

The functions of the following buttons can be used for the assignment:

4 main buttons (■/X, ▲/Y, ✕/A, ●/B), L1, L2, R1, R2.

Programming:

1. Call up programming mode: Press and hold the 'SELECT/SHARE' and 'START/OPTIONS' buttons simultaneously (approx. 3 sec.) until the green LED lights up.
2. Press the control element to be programmed – the green LED flashes.
3. Assign the desired function to the control element by pressing the corresponding button (■/X, ▲/Y, ✕/A, ●/B, L1, L2, R1 oder R2) – the LED goes out.

Further options:

- Assign pedals with Y-axis: Press the D-pad to the left in programming mode.
- Assign shift paddles with Y-axis: In programming mode, press the D-pad to the right in programming mode.
- Delete individual programming: Press the reprogrammed button twice in programming mode.
- Delete entire programming: In programming mode, press and hold 'START/OPTIONS' (approx. 4 sec.) until the green LED goes out.

Setting the steering sensitivity

1. Call up programming mode: Press and hold the 'SELECT/SHARE' and 'START/OPTIONS' buttons simultaneously (approx. 3 seconds) until the green LED lights up.
2. Press 'SELECT/SHARE'. The flashing speed of the green LED indicates the current sensitivity:
 - low = slow flashing
 - medium = medium-fast flashing
 - high = fast flashing
3. Switch through the sensitivity levels with 'SELECT/SHARE'.
4. Confirm the selected sensitivity: Press the D-pad upwards – the green LED goes out.