

**● SYSTEM REQUIREMENT**

1. Windows 98 / ME / 2000 / XP
2. Media player 6.0 / 7.0 version or above
3. IE 4.0 version or above
4. Outlook 4.0 version or above

**● CONNECT THE USB KEYBOARD**

**To set the USB Keyboard port:**

Before connecting the keyboard to a USB port on the computer, please make sure that your computer supports USB keyboard. Some older computer do not fully support for USB keyboard. Please refer to the computer manual for additional information, or follow the instructions as below.

1. Access the system setup utility on your computer. On most computers this is done by pressing the F1, F10, Delete or Esc key during system booting, i.e. immediately after switching on the computer.
2. Find the USB Keyboard Port mode and set it for Enable. If the USB Keyboard port selection is unavailable, the USB Keyboard port is probably already set for USB Keyboard port Enable or your PC does not support for USB keyboard. Please contact your PC Manufacturer for Specifications
3. Save your changes and exit the system setup utility.

**● OPTIONAL**

**Keyboard Skin** -- Enable you to protect your keyboard from damaging dust, liquid Spills and grease, etc.










 
 
 





 
 

**UP COMBO Adaptor** -- USB adaptor to PS2 adaptor for Keyboard

**2 USB Hub** -- Enable you to plug USB devices into Keyboard directly.

**~NOTE~ THE POWER CONSUMPTION OF THE ATTACHED USB DEVICE HAS TO BE RATED AT 100MA OR BELOW.**




- Specification subject to change without notice
- All products and company name referenced herein are trademarks of their respective Companies.

## 1. MULTIMEDIA KEYS OPERATION

Icon	Function	Multimedia Function Description
	Back	Back to the previous page
	Forward	Forward to the next page
	Stop	Stop loading the current web page
	Refresh	Update the current web page
	Search	Go to the default search website
	My favorite	Open My Favorites
	Home	Open the default Internet browser at the default home page
	Open E-mail	Open the default e-mail program
	Mute	Turn the computer's sound off and on
	Volume Down	Lower the volume
	Volume Up	Raise the volume
	Previous Track	Go to the previous media file
	Stop playing	Stop playing the current media file
	Play Media File/ Pause	Play or pause the selected media file
	Next track	Go to the next media file
	Media Select	Open the default CD audio player
	Caloulator	Open My Computer
	My computer	Open the Windows calculator and press again to close It
	Fn Key	The FN key can also be assign to a frequently used command. See the <Programmable Multimedia Keys > section for more InformationPower/ Sleep
	Power/ Sleep	Power down the computer or set it into Sleep mode

## 2. PROGRAMMABLE MULTIMEDIA KEYS

**IT IS POSSIBLE TO RECONFIGURE THE MULTIMEDIA HOT KEYS TO FOR EXAMPLE START A PROGRAM, OPEN A WEB SITE OR OPEN A FILE. PLEASE FOLLOW THE INSTRUCTIONS BELOW:**

1. After installing the Multimedia driver, The Media Key Icon  will display on the Windows Task Bar.
2. Double Click the Media Key Icon 
3. The Media Key setting windows will appear. Click the key you want to reconfigure.
4. After clicking the key, the [ Configuration ] window appears.
5. Change the configuration of the hot keys.
6. Click OK to close the [ Configuration ] windows
7. Double Click the Media Key tray icon  on the Windows Task Bar to close the Media Key setting window.

