

CE

SPEEDLINK®

© 2015 Jöllenbeck GmbH. All rights reserved. SPEEDLINK, the SPEEDLINK word mark and the SPEEDLINK swoosh are registered trademarks of Jöllenbeck GmbH. DUALSHOCK is a registered trademark of Sony Computer Entertainment Inc. PS4 is a trademark of Sony Computer Entertainment Inc. All trademarks are the property of their respective owner. Jöllenbeck GmbH shall not be made liable for any errors that may appear in this manual. Information contained herein is subject to change without prior notice. Please keep this information for later reference.
JÖLLENBECK GmbH, Kreuzberg 2, 27404 Weertzen, GERMANY

TECHNICAL SUPPORT

Having technical problems with this product? Get in touch with our Support team –
the quickest way is via our website: www.speedlink.com.


TRAX HEADSET ADAPTER



QUICK INSTALL GUIDE
SL-4500-V2

QUICK INSTALLATION GUIDE

TRAX – HEADSET ADAPTER

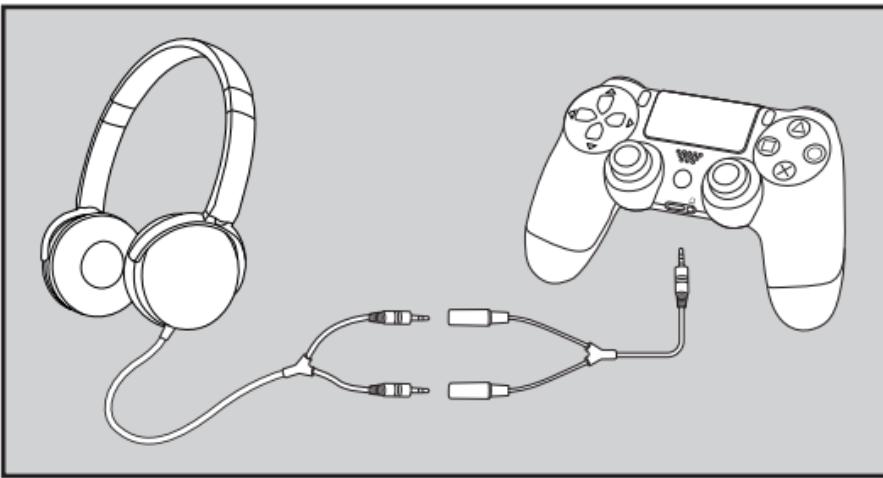

EN

PS4™ GUIDE

Connect the headset to the DUALSHOCK®4 gamepad using the accompanying adapter cable with twin 3.5mm jack sockets. Audio input and output will be assigned automatically to the relevant controller.

PS4™ SETTINGS

From the PS4™ main menu, select “Settings”, “Sound and Screen”, “Audio Output Settings” and “Output to Headphones”.

You can adjust your headset settings here. Select “All Audio” to output both the game sound as well as chat audio via the headset. Select “Chat Audio” to output only the voice-chat audio via the headset – game sound will be output via the HDMI or Toslink cable, if applicable.

Adjust the headset master volume level by selecting “Settings”, “Devices”, “Audio Devices”, then “Headset and Headphones”.

DE

HINWEIS FÜR DIE NUTZUNG AN DER PS4™

Schließen Sie das Headset direkt über das beiliegende Adapterkabel mit zweifacher 3,5-mm-Klinkenbuchse an das DUALSHOCK®4-Gamepad an. Die Ton-Ein- und Ausgabe wird automatisch dem jeweiligen Controller zugewiesen.

PS4™-EINSTELLUNGEN

Wählen Sie im Hauptmenü der PS4™ „Einstellungen“, „Sound und Bildschirm“, „Audioausgabe-Einstellungen“ und „Ausgabe über Kopfhörer“.

Hier können Sie Einstellungen für Ihr Headset anpassen. Wählen Sie „Gesamtes Audio“, um sowohl den Spiele-Sound als auch den Voice-Chat über das Headset auszugeben. Wählen Sie „Chat-Audio“, um nur den Voice-Chat über das Headset auszugeben – in diesem Fall wird der Spiele-Sound über ein angeschlossenes HDMI- oder Toslink-Kabel ausgegeben.

Die Einstellung der Wiedergabelautstärke über das Headset nehmen Sie bitte vor, indem Sie im Hauptmenü „Einstellungen“, „Geräte“, „Audiogeräte“ und „Headset und Kopfhörer“ wählen. Unter dieser Einstellung können Sie die Gesamtlautstärke des Headsets einstellen.